



.mətaya gnitaən you will soon have total control over your home bne sonsuper du tes trats kollow the quick start set up sequence and

System Requirements

- An active broadband connection.
- 230v mains supply (Adaptor supplied).
- A mobile device running iOS, Android or A broadband router with DHCP function.
- Windows Operating System.













heatmiser and Hub





Ethernet Port retuck Souter

qnHoəu

Power

Link LED will turn GREEN.

- 1

Once connected to the Heatmiser cloud server, the

The router will automatically assign an IP address

the neoHub has connected to your network. to the neoHub, the Link LED will light up RED once

Connect the power supply to the neoHub.

I Ethernet Port



Vel9 slgood

.fnuoson nov register your account. as your neoHub. Download the FREE Heatmiser Connect your mobile device to the same wifi network



twitter witter: @heatmiseru Find us on: facebook Facebook

balloade enclased with of
are with all there have the theory of the transition of transition of the transition of transit

Unce registered & signed in , select

noitecol bbA

NOITAJOL DA

FAQ



Want More Information?

PDF

Communication between the Heatmiser neoHub and neoStat, neoStat-e, neoStat-hw, neoStat 12v, neoAir, neoPlug & neoUltra is secured by utilising frame-protection mechanism based on Advanced Encryption Standard (AES) with 128-bit randomly generated keys.

VIDEO



Press the connect button on the neoHub to add the Location to your Account.





When successfully connected, add a title for the new location (e.g. Home). The next step is to join neoStats to the neoHub. Select *ADD NEOSTAT* in the App.





Select from a preset title or enter your own custom title for the neoStat, then press *NEXT*



7 Pairing mode active

- Use the < / > keys to select SETUP and press the ✓ key twice.
- 2 The 奈 symbol appears flashing on the display
- 3 When the neoStat successfully connects to the neoHub the symbol will then be permanently displayed



8 Add Another/Finish

When complete, press ADD ANOTHER for any additional zones on the network or press FINISH to complete setup.





1. Pair your Heatmiser neoHub to HomeKit with the neoApp

From the settings screen, select HomeKit & Siri.

If no HomeKit homes have been created Select CREATE A NEW HOME

Enter a title for your home. Tap on the right arrow to enter the home. Select **ADD NEW ACCESSORY**

The app will now scan for compatible HomeKit devices.

Click on **Heatmiser neoHub**, scan the HomeKit setup code on the reverse of your neoHub with the camera on your iOS device.

Your neoHub is now successfully paired to HomeKit!

2. Assign your devices to rooms.

The next steps in the app are to sort all attached devices paired to the neoHub into your HomeKit rooms.

At the same time, you can edit the service names of the attached devices.

Rename the service as you would like to refer to it via Siri voice control, and assign it to the relevant room.

Repeat this process for all of your devices.

Once you have done this select FINISH SETUP

3. Create automations, share control and configure other HomeKit enabled devices.

Learn how to set HomeKit automations, use Siri voice control, add users and configure other Apple devices with the iOS10 Home app - visit: www.apple.com/uk/ios/home



See neo.heatmiser.com for more details.