Last Updated: FEB 22


PRODUCT DATA SHEET

RANGE: **Fixing Kits**

CODE: **PL8**

DESCRIPTION: **First Fix Kit PL8**

DIMENSIONS

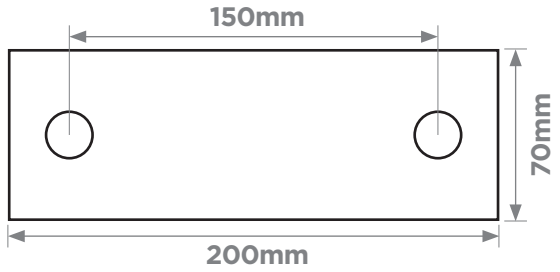

INSTALLATION


1. Fix the **Marflow Shower PL8** on a noggin or brick/block wall.
2. Install 15mm copper hot and cold feed pipes ensuring they will protrude approximately 60mm from the finished wall surface.
3. Tighten up the clamping nuts.
4. Finish the wall with plaster and/or tiles.
5. Using a pipe slice, cut the copper pipes to ensure that the shower mixer cover plates meet the finished wall.
6. Flush the pipework.
7. Use the fittings supplied to install the shower mixer.

SHOWER PL8™

The perfect shower fixing for a quick 'first fix' install

Firmly clamps 15mm copper pipes accurately in place at 150mm centres

Supplied complete with brass fittings to connect to the majority of bar shower mixers

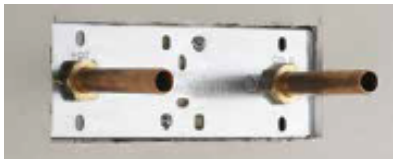





marflow
ESTABLISHED IN BIRMINGHAM 1968

Marflow Engineering Limited
Britannia House . Austin Way . Hamstead Industrial Estate . Birmingham . B42 1DU . United Kingdom
t. +44 (0)121 358 1555 e. info@marflow.co.uk w. marflow.co.uk